

## CLEANING

Before cleaning the heater, disconnect it by pulling out the plug from the wall socket. Do not use detergents, abrasive cleaning powder or polish of any kind on the body of the heater.

Allow the heater to cool, then wipe with a dry cloth to remove dust and a damp cloth (not wet) to clean off stains. Be careful not to allow moisture into the heater. To clean the reflector, see 'Maintenance' on page 3.

Your appliance is guaranteed for one year from the date of purchase. We undertake to exchange or repair free of charge within this period, any part (excluding lamps) found to be defective due to a manufacturing fault. This guarantee in no way prejudices your rights under common law and is offered as an addition to consumers' statutory rights. If your appliance requires service or does not seem to be working correctly, please either return it to your supplier, together with your dated receipt or proof of date of purchase, or call us on the Customer Services number given below.

Glen Dimplex (UK) Ltd  
Millbrook House  
Hedge End  
Southampton  
Hampshire  
SO30 2DF  
Customer Services: Tel. 0870 7270101  
Fax. 0870 7270102

For service in the republic of Ireland contact:  
DIMPCO Ltd  
Airport Road  
Cloghran  
Co. Dublin  
Tel. 01-8424833

Specification subject to change without prior notice.

The product complies with the European Safety Standard EN60335-2-30 and the European Standard for Electromagnetic Compatibility (EMC) EN55014, EN60555-2 and EN60555-3 which cover the essential requirements of EEC Directives 73/23 and 89/336.



8/18447/0

 **Dimplex**

## Installation

Unpack the heater carefully and retain all packaging for future use.

Always ensure that the heater is stood on a firm, level base near to, but not directly beneath, a suitable mains supply socket.

### Safety Information WARNING –

 
- Do not use this appliance in the immediate surroundings of a bath, a shower or a swimming pool.
- This heater must not be located immediately below a fixed socket outlet.
- This heater carries a **WARNING 'DO NOT COVER'** to alert the user to the risk of overheating that exists if the heater is accidentally covered.
- This fire is intended to be placed in a fireplace.
- The guard on this appliance conforms to the requirements of BS 1945 (1971) and satisfies the heating appliances (fireguards) regulations 1973. The guard is to prevent the risk of fire or injury from burns, and no part of it should be permanently removed.
- This appliance must be positioned so that the plug is accessible.
- If the supply cord is damaged it must be replaced by the manufacturer or service agent or a similarly qualified person in order to avoid a hazard.
- It does not give full protection for young children or the infirm.
- This heater is designed to meet the requirements of the relevant British and European Standards for safety. However, we do not recommend its use directly on deep pile carpets or long-haired rugs.
- A minimum clearance of 1 metre (39") must be maintained between the heater and any surrounding furniture, overhanging curtains or other combustible materials.

### WARNING - THIS APPLIANCE MUST BE EARTHED


This heater must be used on an AC ~ supply only and the voltage marked on the heater must correspond to the supply voltage. This heater is fitted with a rewirable plug incorporating a 13 amp fuse. In the event of replacing the fuse in the plug supplied, a 13 amp fuse approved by ASTA to BS 1362 must be used.

**IMPORTANT:** If the plug is not suitable for your socket, the 13 amp plug should be removed. Before wiring the appropriate plug, please note that the wires in this mains lead are coloured in accordance with the following code.

<b>GREEN AND YELLOW:</b>	<b>EARTH</b>
<b>BLUE:</b>	<b>NEUTRAL</b>
<b>BROWN:</b>	<b>LIVE</b>

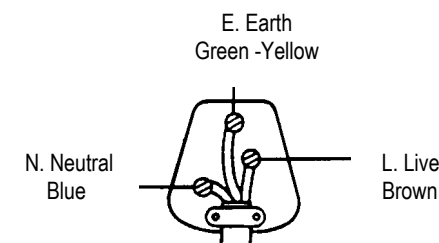

**Wiring a 15 amp plug**

 Connect the **GREEN AND YELLOW** wire to the terminal marked 'E' or by the earth symbol  or coloured **GREEN** or **GREEN AND YELLOW**. Connect the **BROWN** wire to the terminal marked 'L' or coloured **RED**. Connect the **BLUE** wire to the terminal marked 'N' or coloured **BLACK**.

**CAUTION -** Do not use this heater in conjunction with a thermal control, a programme controller, a timer or any other device which switches on the heater automatically, since a fire risk exists when the heater is accidentally covered or displaced.


## INSTALLATION AND OPERATING INSTRUCTIONS
 
## USING THE HEATER

## Before switching on

Remove the fuel effect (two screws) and check that the lamp and flicker rotor are positioned correctly. The flicker rotor should sit horizontal on its pin and spin freely without fouling its mounting brackets. If necessary, adjust the bracket by bending slightly. Refit the fuel effect by inserting the front edge first, then secure with the screws. Ensure that all packing items are removed (read any warning labels carefully) and that the radiant elements and fuel effect are positioned correctly, otherwise damage may occur.

Remove for access  
to lamp and  
flicker rotor.

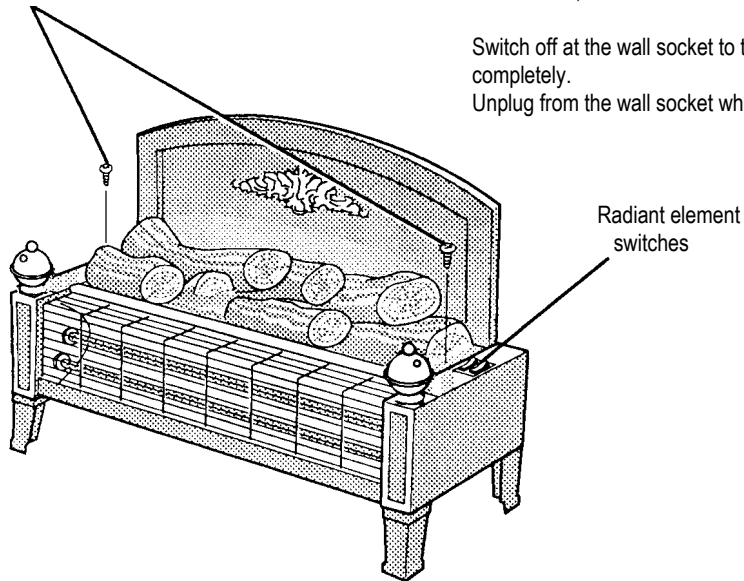


When you are certain that you have completed the installation, plug in and switch on at the wall socket. The fuel effect will light. The flicker rotors will begin to rotate after a minute or so.

## Radiant elements

 Each of the two radiant elements provides 1000 watts of heat.

The left-hand switch controls the lower element.

The right-hand switch controls the upper element.

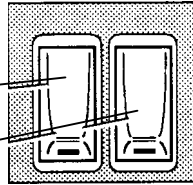

A switch is set to ON when the red dot is visible. For full heat, set both switches to ON.

Switch off at the wall socket to turn the heater off completely.  
Unplug from the wall socket when not in use.

## Removing the guard

To remove the guard, remove the two screws along the bottom edge of the guard, then swing the guard upwards to gain access to the elements. See Fig. 1.

Replace the guard in reverse order

## Removing the elements

The element holders are spring loaded. To remove an element, grip one end using a soft cloth to protect the surface, then push carefully but firmly to one side until the other end disengages from its socket. Withdraw the element carefully.

See Fig. 2

Refit in reverse order.

## Cleaning the reflector

The reflector may be more easily cleaned if the elements are first removed (see above). Wipe the reflector with a warm soapy cloth, then buff with a soft dry cloth. DO NOT use abrasive cleaning powders or metal polish. See Fig. 3.

## Lamp replacement

Remove the fuel effect (two screws) and replace the defective lamp with a 60 watt, 220/250 volt, 2 pin bayonet cap (BC) fuel effect lamp. Ensure that the flicker rotor spins freely, then reassemble.

## MAINTENANCE

**WARNING : ALWAYS DISCONNECT FROM THE POWER SUPPLY BEFORE ATTEMPTING ANY MAINTENANCE.**

